



**Torque - Oil pump bolts: 12Nm**

## **7.6 Oil Pipes and Routing**

### **7.6.1 Oil Pipe Removal**

- Remove fuel tank (see Fuel System chapter)
- Remove battery and battery tray (see Electrical System chapter)
- Cut double eared clip off and remove oil pump banjo, remove “oil inline filter to oil pump hose” along with hose clips.
- Remove clip which clamps 6100035 to the inline oil filter and remove the inline filter.
- Remove hose 6100035.



- Remove oil pump banjo bolt, cut double eared clip off oil cooler, and remove hose 6100036.



- Cut double eared clip off oil cooler, cut double eared clip off oil tank, and remove hose.



Double eared clips – cut off to remove using an appropriate tool.